



EXTREME™



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTION AND SAFETY
PRECAUTIONS BEFORE OPERATING PRODUCT!
SAVE FOR FUTURE REFERENCE, WARRANTY PERTINENT
CONTENT.**

Product Specifications:

Model – EXTREME

Voltage – 115v	Voltage – 230v
Amperage – 17.40	Amperage – 10.10
Wattage – 2001	Wattage – 2323
Hertz – 60	Hertz – 50/60
Horse Power: 3 Each Motor	Horse Power: 3 Each Motor
Motor Air Volume: 124CFM Each	Motor Air Volume: 124CFM Each

9711 Mason Avenue Chatsworth, CA 91311
(818) 772-2887 (800) 821-9449 Fax: (818) 886-0218
www.DoubleKIndustries.com info@DoubleKIndustries.com

IMPORTANT SAFEGUARDS

WARNING: IMPORTANT SAFETY PRECAUTIONS!! PLEASE READ COMPLETELY BEFORE USING PRODUCT!!

When using electrical appliances, especially when children or animals are present, basic safety pre-cautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including, but not limited to the following:

DO NOT TURN ON DRYER WITHOUT FIRST HOLDING THE DRYER HOSE, as the air volume from the dryer can cause the hose to whip or move rapidly and may cause injury.

1. Do not leave dryer OR the animal unattended while product is in use.
2. Unplug unit when not in use.
3. Do not use extension cords with dryer.
4. Do not unplug unit by pulling on cord.
5. Do not expose dryer to rain or water.
6. Do not use or store dryer where it can fall or be pulled into tub or sink or standing water. If dryer falls into water . . . UNPLUG IT . . . Do not reach into the water!
7. Unplug unit before attempting any maintenance or service.
8. Do not put any object into dryer openings.
9. Keep loose clothing, jewelry and hair away from dryer openings.
10. Do not direct dryer air towards eyes or ears of people or pets.
11. Never use dryer if it has a damaged cord or plug, has been dropped, damaged, exposed to rain or water. Return to **Double K Industries** or an Authorized Service Center for service.
12. This dryer should not be used as a cage dryer, for cage drying please consider our model 560 Cage dryer.
13. This product is for use on animals only.
14. Recommended operation by adults only. Use caution when working around children.
15. Do not use attachments not recommended by **Double K Industries**.
16. Do not operate without filters in place. Keep filters clean, as dirty filters limit air intake and may damage the motor or cause overheating.
17. Plug only into a properly grounded receptacle. Always make sure the amperage of the electrical outlet is sufficient for the amperage rating of the product. (See Product Specifications for amperage rating of this product).
18. Do not use product for anything other than its intended purpose.
19. Do not attempt to perform any service or maintenance not outlined in instruction manual.
20. Do not attempt any product modifications or alterations. Do not use, if any parts or switches are damaged - send to an Authorized Service Center or **Double K Industries** for service.
21. When servicing, use only **Double K Industries** parts.

Congratulations!

You've just purchased the **Double K CHALLENGAIR EXTREME** Forced Air Dryer, which produces warm, high velocity air under pressure to make your grooming tasks easier. Your new dryer is designed to provide long, reliable service.

Please read this manual carefully and completely before beginning operation of your dryer and keep this manual in a convenient and safe place for future reference.

A warranty card is included with your dryer and should be filled out completely and mailed to Double K Industries within 30 days of the purchase date of your dryer to validate your warranty. Online registration available at www.DoubleKIndustries.com

Your **CHALLENGAIR EXTREME** has a two year warranty covering the unit against defects in materials and workmanship. Regular maintenance items such as brushes and filters are not included (see warranty card for complete warranty information). It is also important to retain your sales receipt as proof of purchase should service ever be needed.

Your **CHALLENGAIR EXTREME** has two brush-type motors. It is important that the brushes be changed when they become worn down to prevent damage to your dryer motor (brushes are maintenance components and are not covered under the warranty). We suggest checking the motor brushes after every 600 hours of dryer use. Please see section on BRUSHES in this manual for instructions.

A NOTE ABOUT HEAT: Your **CHALLENGAIR EXTREME** has no heating element. The **CHALLENGAIR EXTREME** produces heat by a "flow-thru" motor system, meaning the air is pushed through the motors and is warmed by the natural heat of the motors that occurs during operation. This means greater electrical savings and efficiency for you. The dryer will reach its maximum air temperature after about 2-4 minutes of operation. (Note: The higher the room temperature, the warmer the air from the dryer.)

ASSEMBLY

To attach hose to dryer: Your dryer hose has a black hose adapter that will screw onto the hose in a counter-clockwise motion. The adapter with hose attached then fits onto the dryer with a half-twist motion that locks the adapter onto the dryer.

First, place the adapter over the snout of the dryer with a Double K logo facing up then turn adapter counter-clockwise until the adapter locks in place, the Double K logos should then be sitting horizontally.

To remove hose from adapter: Turn the hose clockwise.

ATTACHMENTS: Your dryer is equipped with one hose, 5 twist-on nozzles and 1 compression fit nozzle. To attach nozzles to hose, twist the nozzles "counter-clockwise". Twist clockwise to remove.

OPERATION - Switches and Controls:

1. **Low Speed / Standard Heat** - Turn on the top motor switch.
2. **High Speed / High Heat** - Turn on both motor switches.

REQUIRED MAINTENANCE

FILTERS:

(The maintenance obligations below must be performed on a regular basis or as needed to protect warranty status)

FILTER CLEANING: Both the external and internal filters of the **CHALLENGAIR EXTREME** should be kept clean. If the filters become heavily coated with hair and/or dirt, it will reduce the air out-put of your dryer and can cause damage to the motors or cause the motors to overheat.


*Never operate the dryer without all filters in place.

To clean external filter: Vacuum or shake off dirt and hair daily. Filter may be rinsed in water if necessary. Let filter dry completely before reinstalling on dryer.


To clean the internal *motor* filter of the **CHALLENGAIR EXTREME**:

1. Unplug dryer.
2. Slide off the back cover of the dryer. This is a compression fit and will come off with a little effort.
3. The internal filter is housed inside of a two piece frame. (Pull on tab to remove)
4. Clean motor filter disk by vacuuming off hair and dirt, or wash filter gently in cool water. Shake off excess water and allow to air dry completely.
5. Replace filter disk onto motor assembly housing by pushing into place.
6. Replace dryer back cover.

Any maintenance not explained in this manual should be performed by **Double K Industries**, or an Authorized Service Center. Call **Double K Industries** for the name of an Authorized Service Center nearest you. All warranty service must be performed by an Authorized Service Center (or Double K Industries) to protect your warranty status.

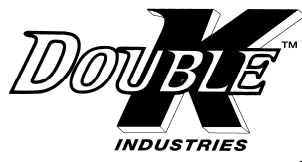

MODEL EXTREME EXPLODED DIAGRAM

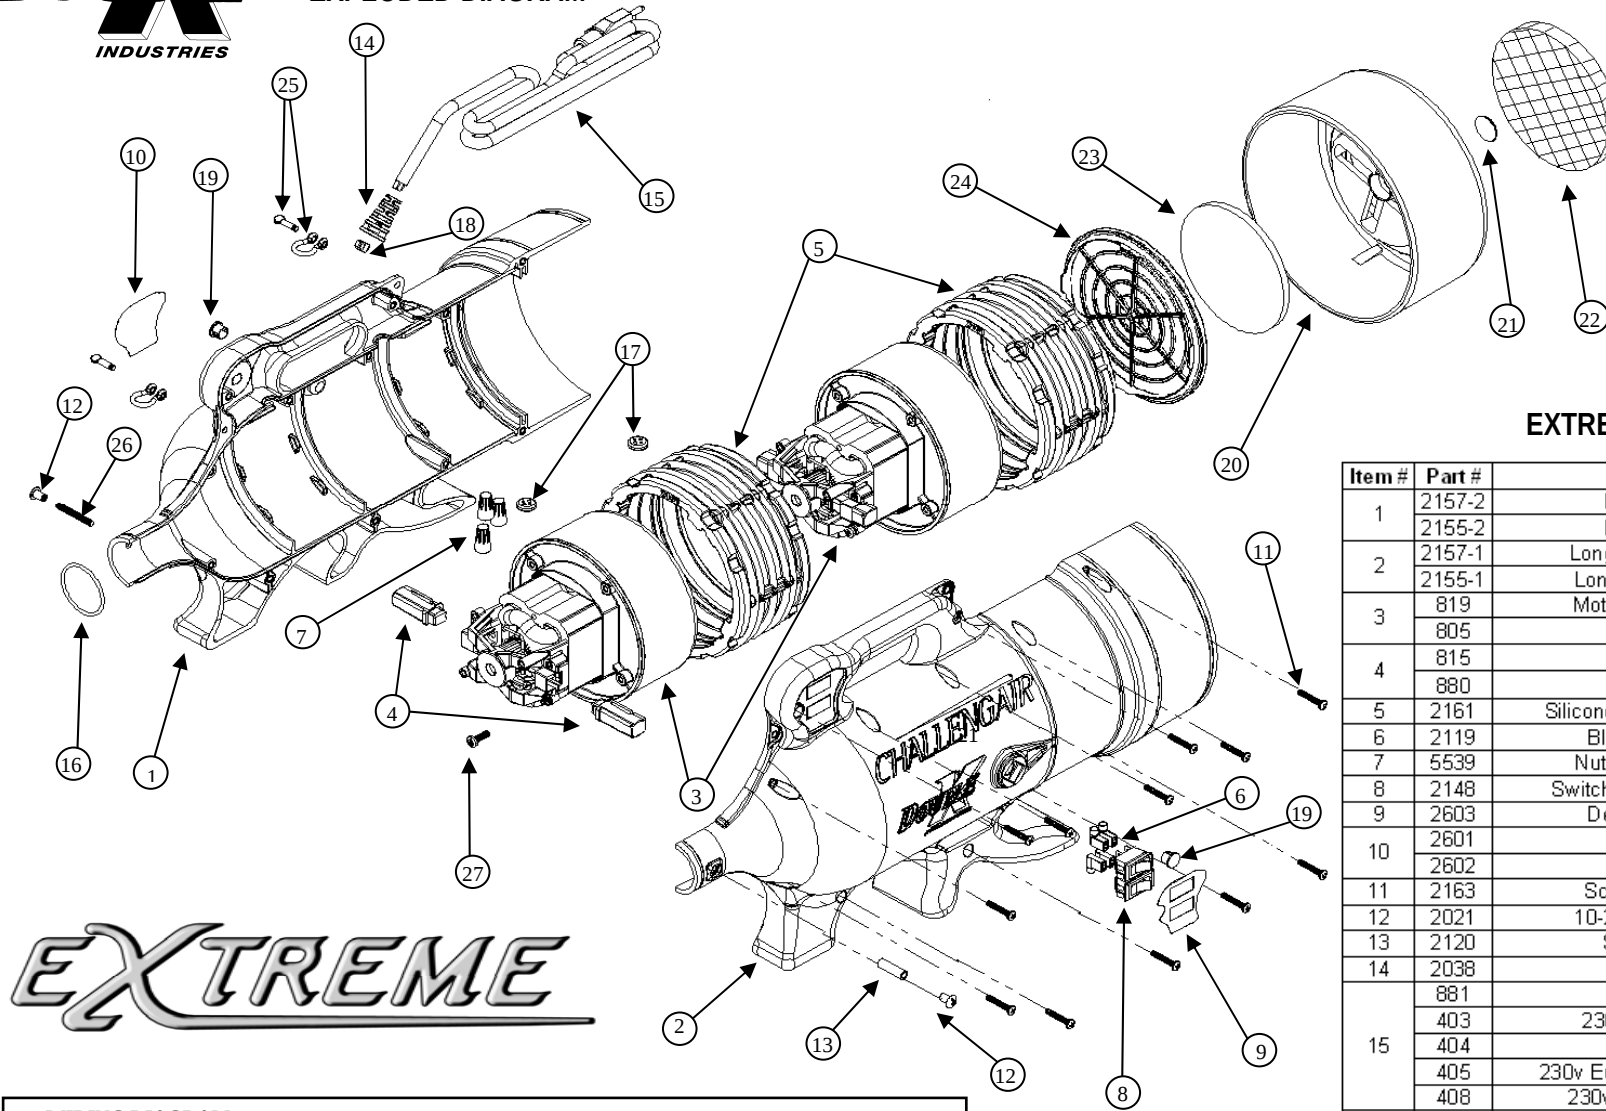

EXTREME PARTS LIST

Item #	Part #	DESCRIPTION	Qty.
1	2157-2	Long Housing, Left Side	1
	2155-2	Long Housing, Left Side	
2	2157-1	Long Black Housing, Right Side	1
	2155-1	Long Blue Housing, Right Side	
3	819	Motor 120v 60 Hz LM #115923	2
	805	Motor w/Choke, 230v	
4	815	Motor Brushes, 115v	4
	880	Motor Brushes, 230v	
5	2161	Silicone Rubber Molded Motor Mount	2
6	2119	Blue Terminal Flag 16-14ga	4
7	5539	Nut, Orange Hard Plastic Wire	3
8	2148	Switch Rocker 20A 125VAC 2-POS	2
9	2603	Decal, Extreme Switch Side	1
10	2601	Decal, 115v Extreme	1
	2602	Decal, 230v Extreme	
11	2163	Screw, 2600 Series Housing	12
12	2021	10-24x3/8" Barrel Nut (Binding)	2
13	2120	Spacer, Nylon Stand Off	1
14	2038	Strain Relief (14/3 cord)	1
	881	Assy. Cordset 115v	1
15	403	230v GB Cordset UK-Ireland	
	404	230v China Cord	
	405	230v Eur. Cordset Continental Europe	
	408	230v Aus Cordset New Zealand	
16	2108	Housing O-Ring for Hose Adapter	1
17	2159	Wire Grommet, 4-Hole	2
18	426	7" 18 lb. Natural Nylon Quick Tiewrap	1
19	2123	Housing Plug (models w/o stand)	2
20	2049	End Cap Assembly (Includes 5538 and 2009)	1
21	5538	Velcro for External Filter	1
22	2027	External Filter	1
23	2009	Sound Control Foam Disk	1
24	2100	Rear Filter Frame	1
25	483	Bow Shackle	2
26	2019	Treaded Rod	1

WIRING DIAGRAM

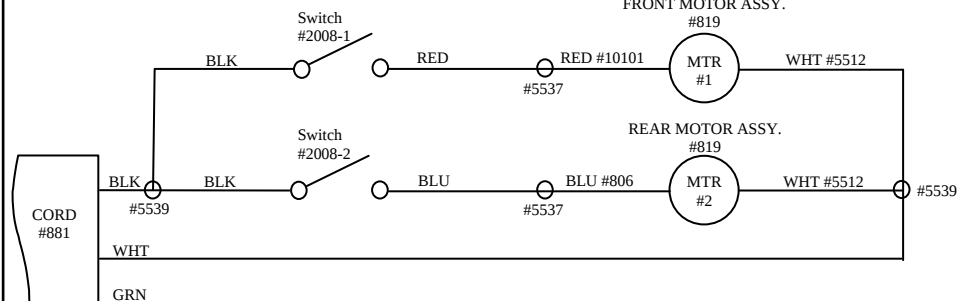


Fig. 1 Side

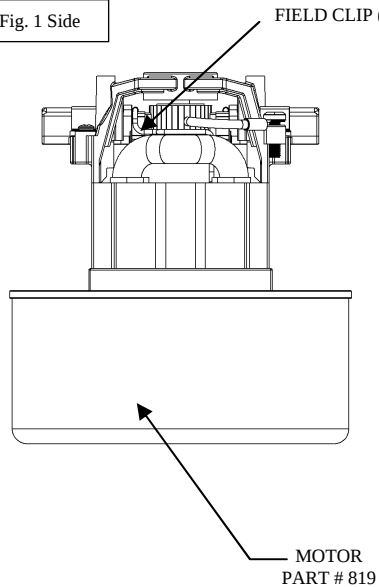


Fig. 2 Top Down


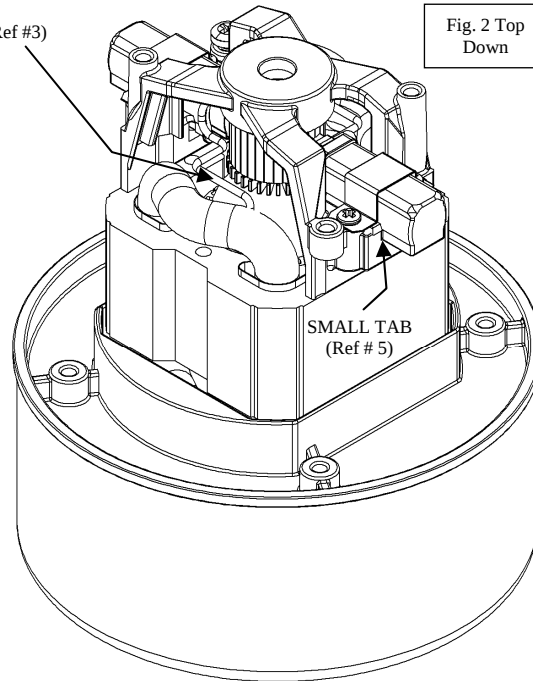


Fig. 3 Top

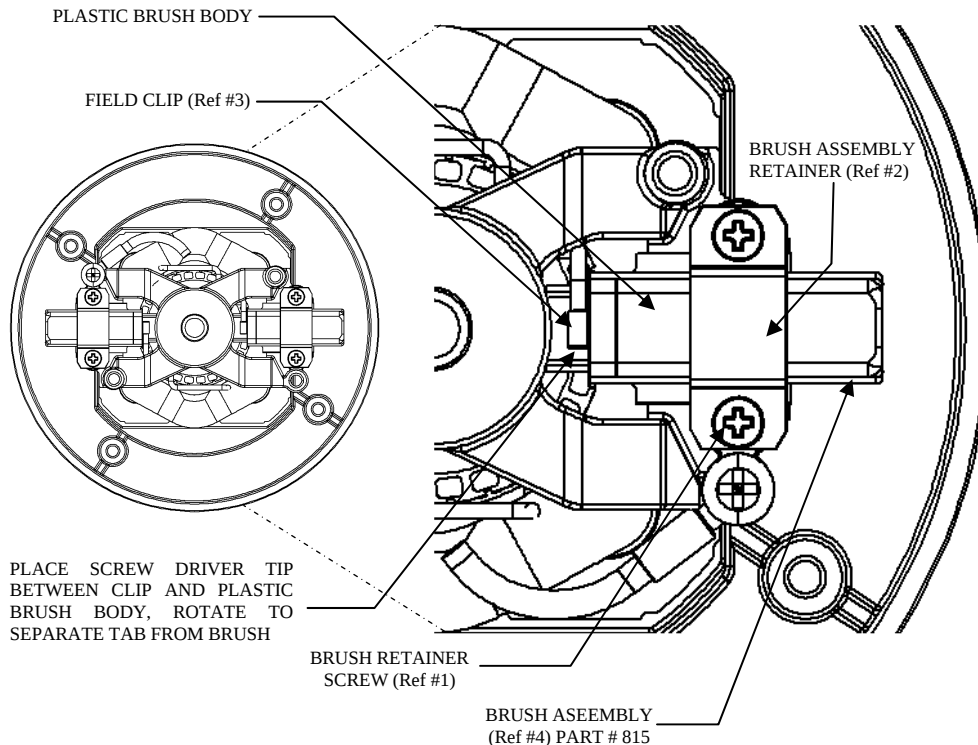

BRUSHES: Your **CHALLENGAIR EXTREME** has two brush-type motors. The brushes should be checked for wear after approximately 600 hours of use. If the carbon brushes are worn shorter than 1/4 inch, the brushes should be replaced. Brushes may be ordered from **Double K Industries** or an Authorized Service Center (you will need 2 sets, 1 for each motor). Please be sure to specify that your dryer is an **EXTREME**, as the brushes are slightly different from one dryer model to another.

To check and/or replace brushes:

1. Unplug electrical cord from wall outlet.

Disassembly:

2. Slide off the back cover from the dryer. This is a compression fit and will come off with a little effort.
3. Remove all screws on the outside of the dryer that hold the two halves of dryer housing in place. It may be best to lay the dryer on its side while removing these screws.
4. Each motor will be sitting in place inside the rubber silicone motor mounts. (Removing the rubber silicone motor mounts from the motor is not necessary to replace brushes)
5. Disconnect the motor power wires.
6. *Front motor:*
 - a. Loosen the two brush assembly retainer screws (Fig. 3, Ref #1) to loosen the brush assembly retainer (Fig. 3, Ref #2), remove field clip (Fig. 3, Ref #3) and then remove brush assembly (Fig. 3, Ref #4), replacing it with a new one. (Note: IMPORTANT - the brush has a small tab on the bottom that MUST be fitted into the slot on the motor frame for proper positioning) (Fig. 1, Ref #5)
 - b. After the new brush assembly is seated, tighten the brush assembly retainer screws.
 - c. Repeat steps A-B for the brush on other side of motor.

Rear motor:

- a. Follow steps A-C above, as outlined for the front motor.

Reassembly:

7. Inspect the motor mounts for cracks or damage -- replace if necessary. Set the motors back into their original positions in the dryer housing. Each motor mount has slots that fits over corresponding alignment tabs on the inside of the dryer housing. These slots and tabs must match up for proper fit and function. (Note: In the event that the motor mount is removed from the motor, simply replace it by being mindful to align the contours of the motor mount with corresponding contours on the motor housing.)
8. Reattach the screws around the outside of the dryer making sure the two halves are matching up.
9. After the two halves of the dryer housing have been put together push the burgundy back cover back onto the rear of the dryer. Make sure all filters are in place before operating dryer.